

C6 / C6M CONTROLLER




FIRMWARE
UPDATE
INSTRUCTIONS

EN


C6/C6M controller firmware can be updated when connected computer to the AHU. This can be done by connecting computer directly as well via local computer network or internet.

To update firmware on C6/C6M controller perform following steps:

1. Stop AHU by pressing **TURN OFF** button on the control panel.

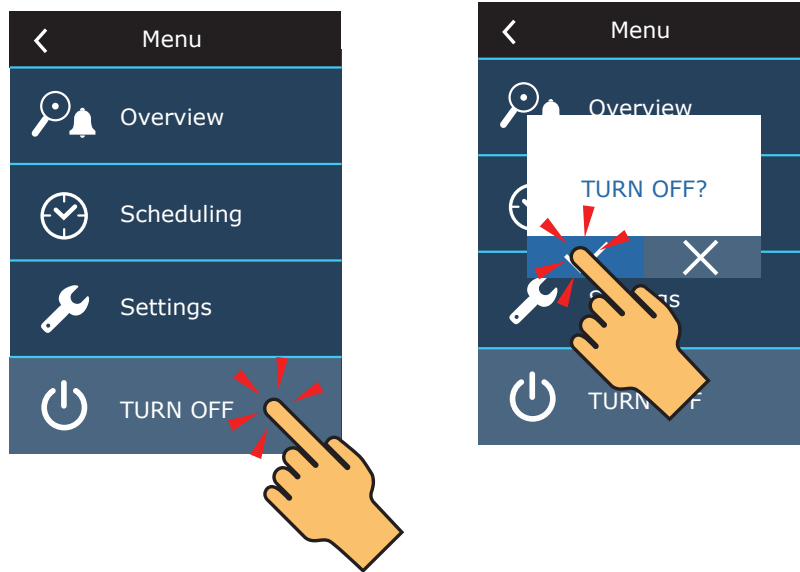


2. On the control panel find the IP address of the ventilation unit.

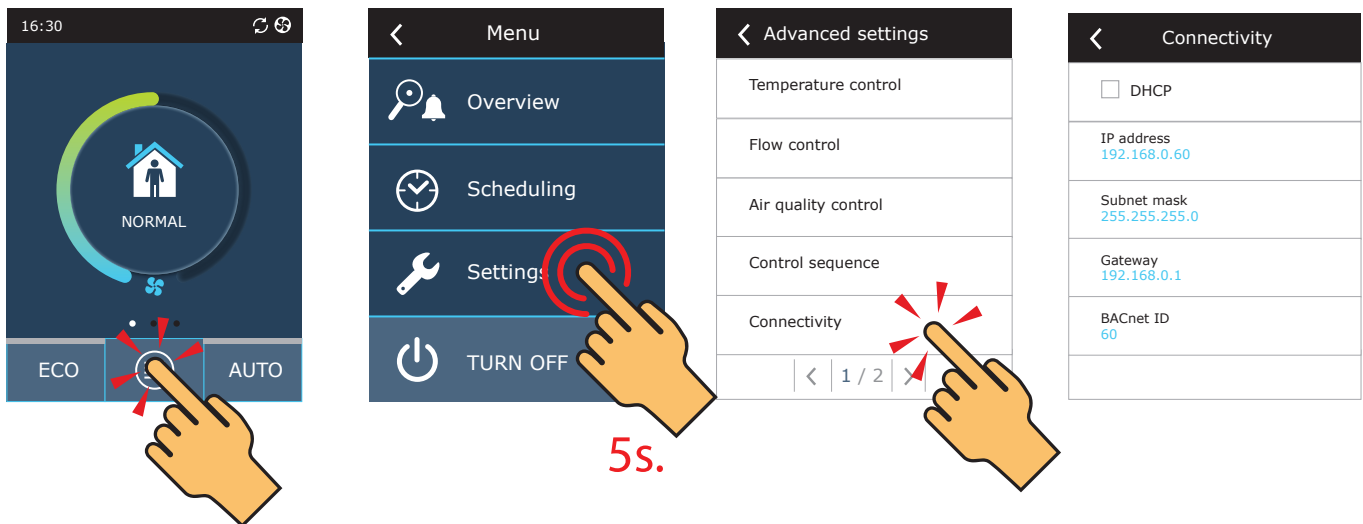

3. Connect AHU to computer or to local computer network¹.

4. On the computer start Internet browser application and enter IP address that was found in the control panel.

5. Connect to the C6/C6M user interface: enter user name **user**, password **user**² and press **Login** button.

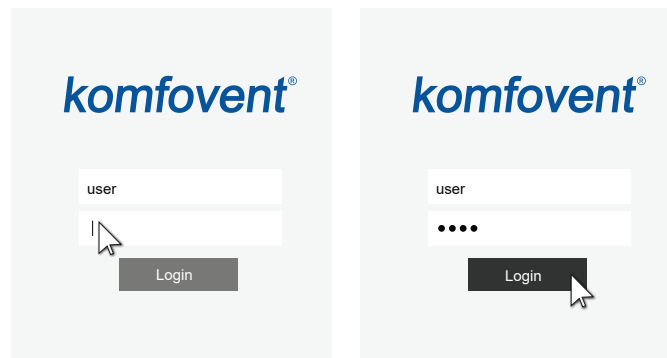

¹ More information about connecting AHU to computer or network can be found in the Domekt user manual.

² If password was changed, please use the actual one.

6. Press **SETTINGS¹** button.

⏪ SETTINGS

USER INTERFACE

Language

Flow units

AHU name

DATE/TIME

Day - month - year

Time

CONNECTIVITY

Status

DHCP

IP address

Subnet mask

Gateway

BACnet ID

BACnet Port

Modbus RTU

INFORMATION

Configuration

Main module firmware

Control panel firmware (1)

Control panel firmware (2)

S/N

C6 ID

C6 QR

Log

Settings file

LOGIN PASSWORD

Enter new password

Confirm new password

CONTROL MODE

Flow control mode

Supply flow correction

Extract flow correction

Temperature control mode

CONTROL SEQUENCE

Icing protection

Indoor humidity Auto

Stage 1

Stage 2

External coil type

Stage 3

Allow dehumidifying with cooling

AIR QUALITY

Impurity control

Humidity control

Sensor 1

Sensor 2

Outdoor humidity

Minimum intensity

Maximum intensity

Check period

FILTERS

Clean filters calibration

CLOUD

"Komfovent Control" password

¹ Settings screen may differ on different firmware versions.

7. In the **INFORMATION** section check current firmware versions of the controller and control panel (firmware version is the last number; for example 1.3.17.20 means that version number is 20).

 
8. If current control panel version is X.X.X.10 or latter, control panel firmware will be updated together with C6/C6M controller firmware. If control panel version is older – only C6/C6M controller can be updated.

9. Download update file from KOMFOVENT website, using following links:

9.1. [Update file for units with main module firmware version X.X.X.15 or later](#)

9.2. [Intermediate update file for units with main module firmware version X.X.X.14 or earlier](#)

10. In the internet browser application window enter IP address of the AHU and add **/g1.html**.




11. If prompted enter user name and password again (see step 5).


12. When screen loads click **Browse**¹ button and specify location of the update file on your computer:

12.1. If control main module firmware version is X.X.X.15 or later, chose *.mbin file


12.2. If control main module firmware version is X.X.X.14 or earlier, chose *.bin file

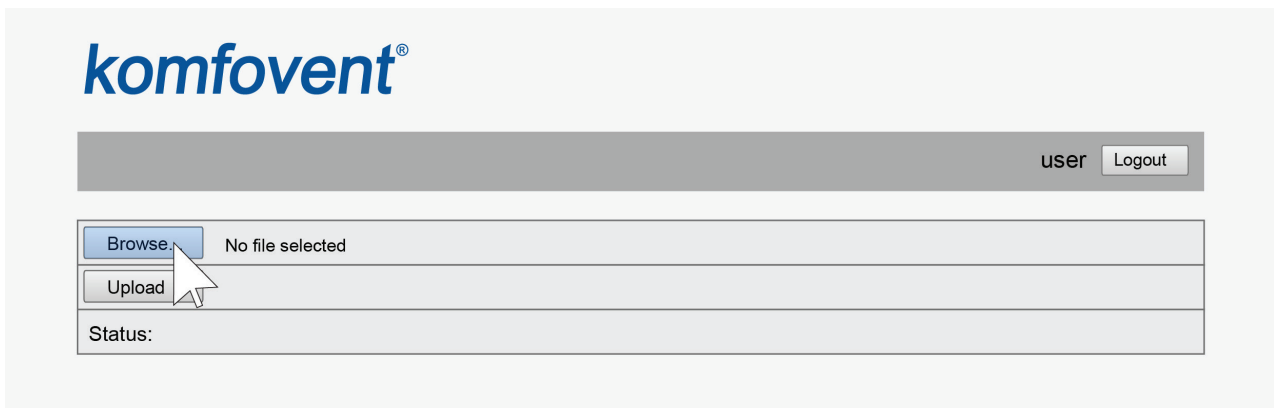

13. When update file is selected, press **Upload** button.

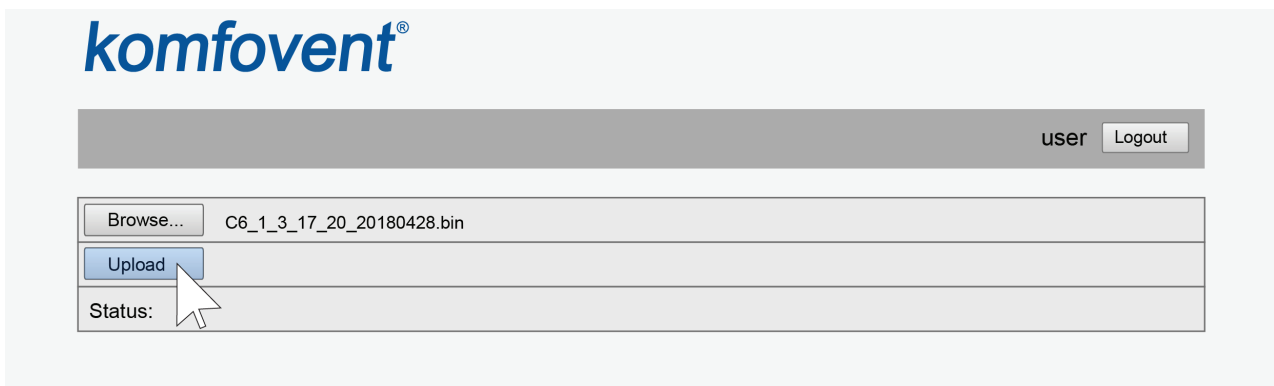

14. In the **Status** line „uploading“ will be displayed.

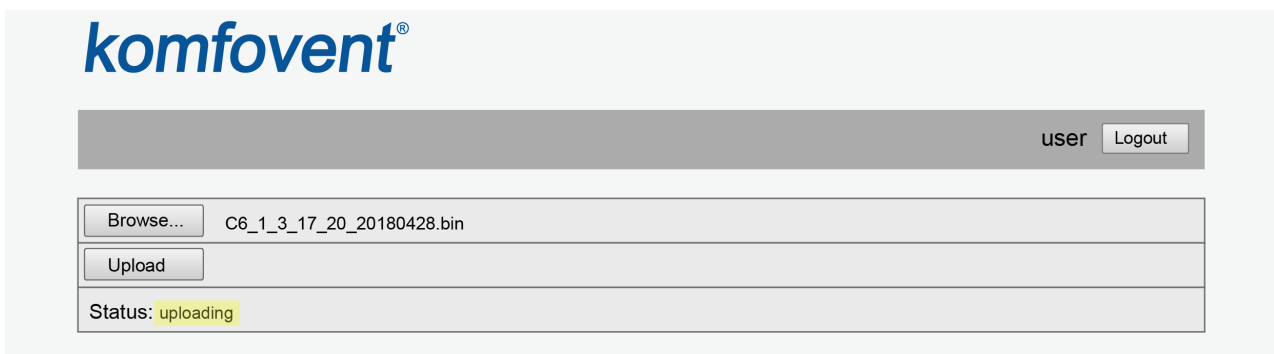


¹ Names of the buttons may be different on different internet browsers.

15. After 30–60 seconds the **Status** line will change to:

15.1. „Firmware uploaded successfully, device is restarting. Panel firmware upload success: wait until finished“, if at the same time control panel firmware was updated



15.2. „Firmware uploaded successfully, device is restarting.“, if only C6/C6M controller was updated:

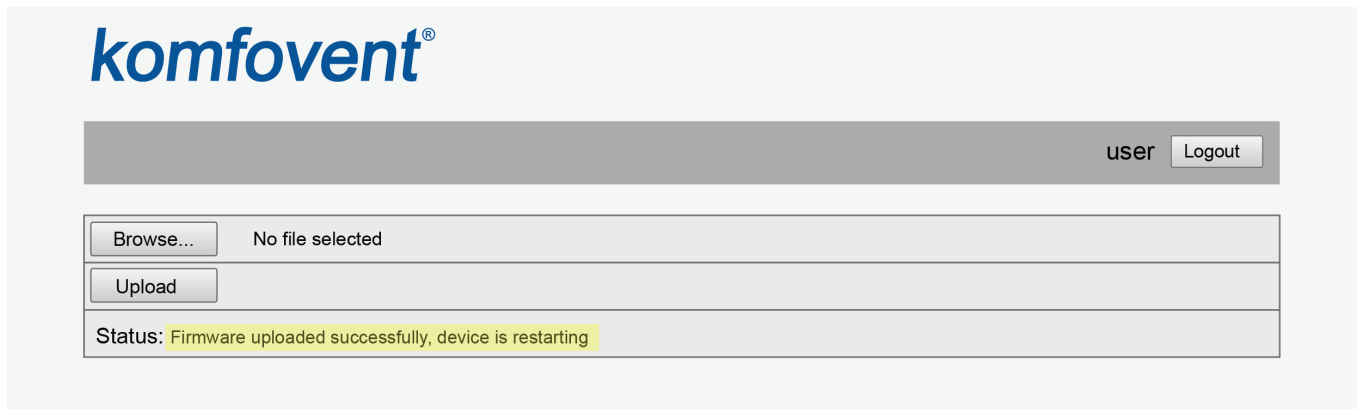

15.3. “Firmware upload error”, if update was not successful (see step 21).

16. Wait for 1–2 minutes, until controller will update the firmware and restart.

16.1. If control panel firmware was updated, on the panel screen “Updating” will be displayed together with the status bar.

16.2. Wait for 1–2 minutes, until control panel firmware will be updated and main screen will return.

17. If C6/C6M controller firmware version before the update was X.X.X.10 or earlier, after update IP address of the unit was restored to default 192.168.0.60. If needed it can be changed using control panel (see step 2).

18. If C6/C6M controller firmware version before the update was X.X.X.14 or earlier, repeat steps 10-16, but use *.mbin update file instead.


19. Check new firmware version number in the internet browser (see steps 4-7) and if OK you can use ventilation unit normally.

20. If control panel firmware version is X.X.X.9 or earlier, new functions introduced with C6/C6M controller update will be available only in the web interface and will not be shown on the control panel display, however the control panel will work normally as before the update. In case if new function access from the control panel is needed – control panel should be replaced with a new one.

21. If firmware update has failed, please perform the following steps and try to update again:

- Make sure correct update file was used (see steps 9 and 12)
- Turn OFF main power for the AHU, wait for 1 minute and turn the power ON
- Restart computer that is used for updated
- Use different internet browser
- Connect computer directly to the AHU (not through a network or internet)

If still firmware update is not successful please contact Komfovent service department.

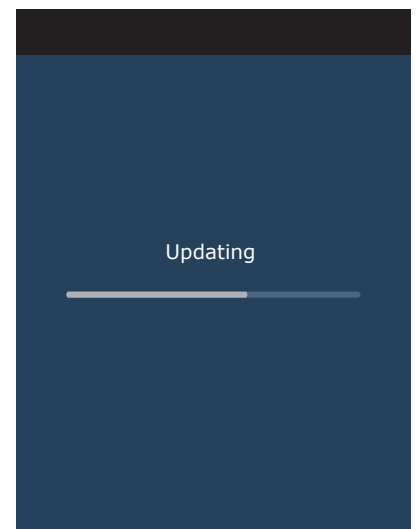

LITHUANIA

UAB KOMFOVENT

TECHNINĖS PRIEŽIŪROS SKYRIUS / SERVICE AND SUPPORT

Phone: +370 5 200 8000

Email: service@komfovent.com

www.komfovent.com

RUSSIA

ООО «КОМФОВЕНТ»

Ул. Выборгская д. 16, стр. 1,

2 этаж, 206 офис, Москва, Россия

Тел. +7 499 673 22 73

info.ru@komfovent.com

www.komfovent.ru

ООО «КОМФОВЕНТ»

Ряжское шоссе, 20 литера Е, пом Н6

390017 г. Рязань, Россия

Тел.: +7 491 255 95 71

info.ru@komfovent.com

www.komfovent.ru

BELARUS

ИООО «Комфовент»

ул. Уручская 21 – 423,

220125 г. Минск, Беларусь

Тел. +375 17 266 5297, 266 6327

info.by@komfovent.com

www.komfovent.by

SWEDEN

Komfovent AB

Ögärdesvägen 12B

433 30 Partille, Sverige

Тел. +46 31 487 752

info_se@komfovent.com

www.komfovent.se

FINLAND

Komfovent Oy

Muuntotie 1 C1

FI-01 510 Vantaa, Finland

Тел. +358 0 408 263 500

info_fi@komfovent.com

www.komfovent.com

PARTNERS

AT	J. PICHLER Gesellschaft m. b. H.	www.pichlerluft.at
BE	Ventilair group	www.ventilairgroup.com
	ACB Airconditioning	www.acbairco.be
CZ	REKUVENT s.r.o.	www.rekuvent.cz
CH	WESCO AG	www.wesco.ch
	SUDCLIMATAIR SA	www.sudclimatair.ch
	CLIMAIR GmbH	www.climair.ch
DK	Øland A/S	www.oeland.dk
EE	BVT Partners	www.bvtpartners.ee
FR	ATIB	www.atib.fr
HR	Microclima	www.microclima.hr
HU	AIRVENT Légtechnikai Zrt.	www.airvent.hu
	Gevent Magyarország Kft.	www.gevent.hu
	Merkapt	www.merkapt.hu
IR	Fantech Ventilation Ltd	www.fantech.ie
IS	Blikk & Tækniþjónustan ehf	www.bogt.is
	Hitataekni ehf	www.hitataekni.is
IT	Icaria srl	www.icariavmc.it
NL	Ventilair group	www.ventilairgroup.com
	DECIPOLE-Vortvent	www.vortvent.nl
	CLIMA DIRECT BV	www.climadirect.com
NO	Ventilution AS	www.ventilution.no
	Ventistål AS	www.ventistal.no
	Thermo Control AS	www.thermocontrol.no
PL	Ventia Sp. z o.o.	www.ventia.pl
SE	Nordisk Ventilator AB	www.nordiskventilator.se
SI	Agregat d.o.o	www.agregat.si
SK	TZB produkt, s.r.o.	www.tzbprodukt.sk

GERMANY

Komfovent GmbH

Konrad-Zuse-Str. 2a,

42551 Velbert, Deutschland

Тел. +49 0 2051 6051180

info@komfovent.de

www.komfovent.de

LATVIA

SIA Komfovent

Bukaišu iela 1, LV-1004 Riga, Latvia

Тел. +371 24 66 4433

info@komfovent.lv

www.komfovent.lv

Vidzemes filiāle

Alejas iela 12A, LV-4219 Valmiermuiža,

Valmieras pagasts, Burtnieku novads

Тел. +371 29 358 145

kristaps.zaicevs@komfovent.com

www.komfovent.lv